


5G LTE Network Extender 4 for Enterprise

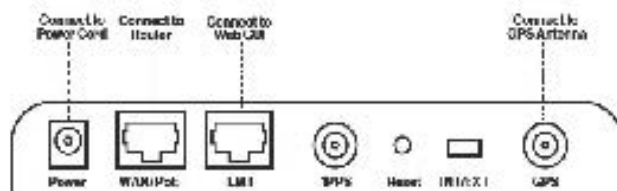

Instructions

- 1 Connect the GPS antenna cable to the GPS port.
- 2 Position the GPS antenna puck near a window so it provides a clear and open view of the sky.
- 3 Connect the Ethernet cable to the PoE/WAN port and connect the other end of the cable to the local router/switch.
- 4 **If there is a Firewall** in the network, please ensure the following server connections are available to the eFemto. The servers' FQDN/IP addresses can be found in the Network Extender User Guide.
 - GPS Assistance Server:** TCP port 80
 - DNS Server:** UDP port 53
 - NTP Server:** UDP port 123
 - Security Gateway:** UDP port 500/4500
 - CMP:** TCP port 80
- 5 Plug in the power supply to the Power port and hand tighten to lock (for installations where PoE is not supported).
- 6 **OPTIONAL STEP** - For local configuration, there are options to access the Web GUI. For detailed instructions refer to "Admin website access" in the Network Extender User Guide.
- 7 Mount the Network Extender to a wall or ceiling. Please wait up to 30 minutes for the unit to complete setup and the Status LEDs to turn GREEN indicating normal operation.
- 8 Dial "#48" to verify that you are under the Network Extender coverage.

Visit verizon.com/support/4g-lte-network-extender-enterprise-basics/ or scan the QR code for detailed instructions and device information.



For more information about our privacy practices, visit verizon.com/about/privacy/

Customer Support: 800-922-0804
DOC-3730-01
Rev 2.0